

SMC-50 Soft Starters

Bulletin 150



Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

Labels may also be on or inside the equipment to provide specific precautions.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



ARC FLASH HAZARD: Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

Product Overview

Preface11
 About This Publication..... 11
 Terminology..... 11
 General Precautions 11
 Summary of Changes 14
 Additional Resources 14

Chapter 1
 Introduction..... 15
 Features 16
 Starting Modes..... 16
 Soft Start 16
 Linear Speed Acceleration..... 17
 Torque Control Start 18
 Current Limit Start..... 18
 Selectable Kickstart 19
 Pump Control Mode 19
 Dual Ramp Start 20
 Full Voltage Start..... 20
 Preset Slow Speed 21
 Integral Motor Winding Heater (starting feature)..... 21
 Stopping Modes..... 21
 Coast..... 21
 Soft Stop..... 22
 Linear Speed Deceleration..... 22
 Pump Stop..... 23
 Braking Control Modes..... 23
 SMB—Smart Motor Braking..... 24
 Slow Speed with Braking 24
 Accu-Stop 25
 External Braking Control 25
 Internal Bypass Modes..... 25
 Solid-state Running Modes 26
 SCR Control - Normal Run Operation..... 26
 SCR Control – Energy Saver Run Operation 26
 External Bypass – Optional Run Operation..... 26
 Emergency Run 27
 Resistor Loads..... 27
 Motor and Starter Protection Features 27
 Starter Protection Features 28
 Metering System 29
 Communications..... 30
 Motor Protection Features 31
 Controller Parameter Configuration..... 32