

# E300 Electronic Overload Relay

Bulletin Numbers 193, 592



## Important User Information

Read this document and the documents listed in the additional resources section about installation, configuration, and operation of this equipment before you install, configure, operate, or maintain this product. Users are required to familiarize themselves with installation and wiring instructions in addition to requirements of all applicable codes, laws, and standards.

Activities including installation, adjustments, putting into service, use, assembly, disassembly, and maintenance are required to be carried out by suitably trained personnel in accordance with applicable code of practice.

If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



**WARNING:** Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



**ATTENTION:** Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.

---

### IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

---

Labels may also be on or inside the equipment to provide specific precautions.



**SHOCK HAZARD:** Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



**BURN HAZARD:** Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.



**ARC FLASH HAZARD:** Labels may be on or inside the equipment, for example, a motor control center, to alert people to potential Arc Flash. Arc Flash will cause severe injury or death. Wear proper Personal Protective Equipment (PPE). Follow ALL Regulatory requirements for safe work practices and for Personal Protective Equipment (PPE).

---

<b>Preface</b>	Terminology.....	15
	Additional Resources.....	15
	<b>Chapter 1</b>	
<b>Product Overview</b>	Overview.....	17
	Modular Design.....	17
	Communication Options.....	17
	Diagnostic Information.....	18
	Simplified Wiring.....	18
	Catalog Number Explanation.....	19
	Sensing Module.....	19
	Control Module.....	19
	Communication Module.....	19
	Digital Expansion Module.....	20
	Analog Expansion Module.....	20
	Operator Station.....	20
	Power Supply.....	20
	Module Description.....	21
	Sensing Module.....	21
	Control Module.....	22
	Communication Module.....	22
	Optional Add-On Modules.....	23
	Optional Expansion I/O.....	23
	Optional Operator Station.....	24
	Optional Expansion Bus Power Supply.....	24
	Protection Features.....	25
	Standard Current-based Protection.....	25
	Ground Fault Current-based Protection.....	25
	Voltage- and Power-based Protection.....	25
	Thermal-based Protection.....	26
	Applications.....	26
	<b>Chapter 2</b>	
<b>Installation and Wiring</b>	Introduction.....	27
	Receiving.....	27
	Unpacking/Inspecting.....	27
	Storing.....	27
	General Precautions.....	28
	Base Relay Assembly.....	29
	Control Module to Sensing Module Assembly.....	29
	Communication Module to Control Module Assembly.....	30
	Expansion Bus Peripherals.....	31
	Expansion Bus Digital and Analog I/O Modules and	
	Power Supply Installation.....	31
	Expansion Bus Operator Station Installation.....	32