

Guardmaster® Safedge™ Pressure Sensitive Safety Edge System Installation and User Manual 440F

Original Instructions in English



Important User Information





Because of the variety of uses for the products described in this publication, those responsible for the application and use of this control equipment must satisfy themselves that all necessary steps have been taken to assure that each application and use meets all performance and safety requirements, including any applicable laws, regulations, codes and standards.

The illustrations, charts, sample programs and layout examples shown in the guide are intended solely for purposes of example. Since there are many variables and requirements associated with any particular installation, Rockwell Automation does not assume responsibility or liability (to include intellectual property liability) for actual use based upon the examples shown in this publication.

Rockwell Automation publication SGI-1.1, Safety Guidelines for the Application, Installation and Maintenance of Solid-State Control (available from your local Rockwell Automation sales office), describes some important differences between solid-state equipment and electromechanical devices that should be taken into consideration when applying products such as those described in this publication.

Reproduction of the contents of this copyrighted publication, in whole or part, without written permission of Rockwell Automation, is prohibited.

Throughout this manual we use notes to make you aware of safety considerations:

<p>WARNING</p> 	<p>Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.</p>
<p>IMPORTANT</p>	<p>Identifies information that is critical for successful application and understanding of the product.</p>
<p>ATTENTION</p> 	<p>Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequences.</p>
<p>SHOCK HAZARD</p> 	<p>Labels may be on or inside the equipment (for example, drive or motor) to alert people that dangerous voltage may be present.</p>
<p>BURN HAZARD</p> 	<p>Labels may be on or inside the equipment (for example, drive or motor) to alert people that surfaces may reach dangerous temperatures.</p>

It is recommended that you save this user manual for future use.

Table of Contents

Introduction	4
System Description	4
Storage and Handling	4
Storage	4
Handling and Transport	4
Safedge Selection	5
Selection Procedure	5
Safedge Profiles	6
Installation of the Safedge System	9
Installation of "C" Rail	9
Mounting the "C" Rail	10
Assembly and Installation of the Safedge Profile	10
Sensing Surface of Safedge System	11
Control Unit Technical Specifications	12
Force Travel Relationship	13
Deformation Travels	13
Selecting the Cushion Factor	15
Mounting	15
Terminal Connections	15
Safedge Control Unit: Electrical Connections	16
Control Unit Installation and Wiring	16
Main selector switch	16
Main input terminal	16
24V AC/DC input terminal +ve and -ve	17
Auxiliary Output terminals 31 and 32	17
Safety Output terminals 13, 14, 23 and 24	17
Reset terminal MC-MC	17
Profile connection to control units	17
Connection in Parallel and Series	18
Connecting in Series	18
Alternative Connection Method	18
Connecting in Parallel	18
Commissioning and Use Sequence of Operation	18
Manual Reset Mode	18
Automatic Reset Mode	19
Comparative Properties	19
Applications	20
Maintenance and Service	21
Troubleshooting Guide	21
Maintenance	21
Profile Cleaning	21
Routine Maintenance Inspection and Test (recommended weekly or after repair)	21
Thorough Examination and Test (twice yearly or after repair)	22
Repair	22
Record of Routine Inspection and Test (see Maintenance section)	23