


# Bulletin 1411 Current Transformers

Catalog Numbers 1411-2xxx, 1411-8xxx, 1411-125, 1411-126, 1411-180, 1411-600, 1411-601, 1411-604, 1411-606, 1411-608, 1411-615, 1411-616, 1411-617, 1411-AL

| Topic   | Page |
|---|------|
| Summary of Changes                            | 2    |
| 1411-2xxx Dimensions and Accuracy             | 2    |
| 1411-8xxx Dimensions and Accuracy             | 3    |
| 1411-125 Dimensions and Accuracy              | 5    |
| 1411-126 Dimensions and Accuracy              | 6    |
| 1411-180 Dimensions and Accuracy              | 7    |
| 1411-600 and 1411-601 Dimensions and Accuracy | 9    |
| 1411-604 Dimensions and Accuracy              | 10   |
| 1411-606 and 1411-608 Dimensions and Accuracy | 11   |
| 1411-615 Dimensions and Accuracy              | 12   |
| 1411-616 Dimensions and Accuracy              | 13   |
| 1411-617 Dimensions and Accuracy              | 14   |
| 1411-AL Dimensions and Accuracy               | 15   |
| Agency Certifications                         | 15   |

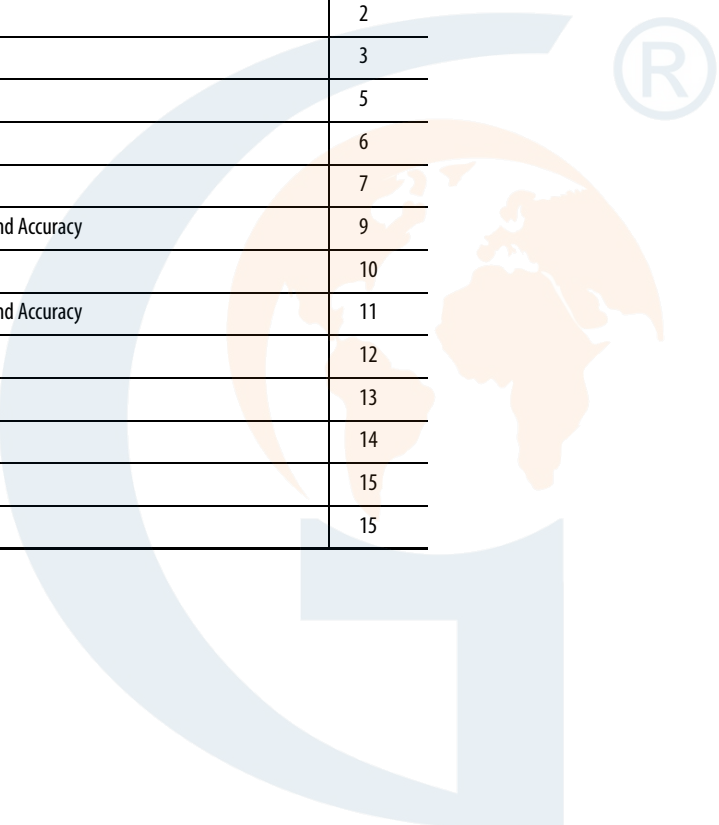

## Summary of Changes

This publication contains new and updated information as indicated in the following table.

**Table 1 - Summary of Changes**


| Topic                              | Page       |
|------------------------------------|------------|
| Updated available catalog numbers. | Throughout |



**ATTENTION:** Proper safety precautions must be followed during installation by a trained electrician. Never install while bus is energized. The current transformer must have its secondary terminals that are short circuited or the burden that is connected, before energizing the primary circuit.

## 1411-2xxx Dimensions and Accuracy

**Figure 1 - 1411-2xxx Dimensions**

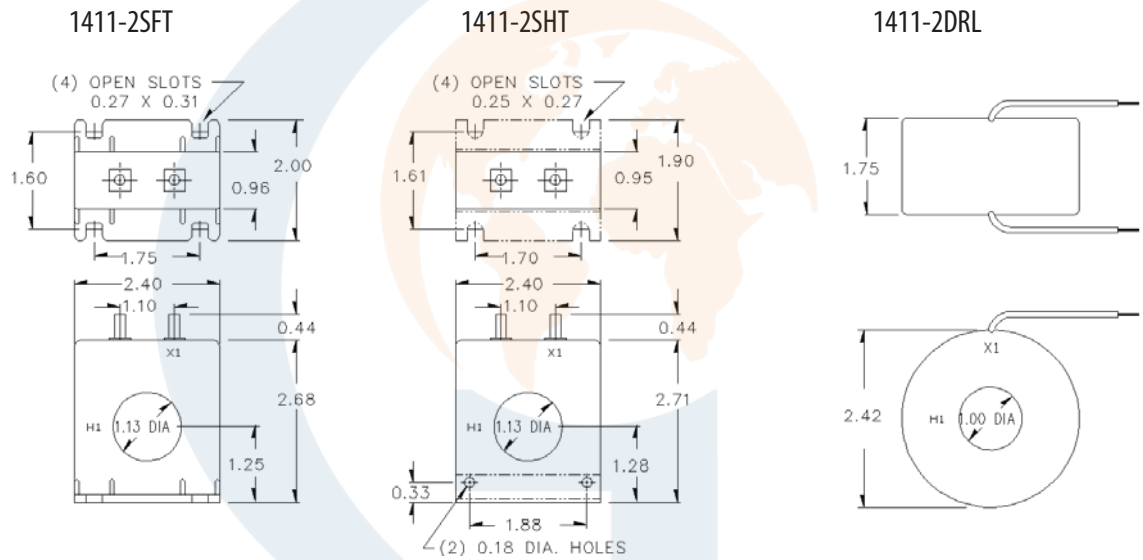

**Table 2 - 1411-2xxx Accuracy**

| Cat. No.                   | Current Ratio | Models 2SFT, 2SHT |                    | Model 2DRL        |                    |
|----------------------------|---------------|-------------------|--------------------|-------------------|--------------------|
|                            |               | Accuracy at 60 Hz | Burden VA at 60 Hz | Accuracy at 60 Hz | Burden VA at 60 Hz |
| 1411-2 <sup>(1)</sup> -500 | 50:5          | ±3%               | 1.5                | ±2%               | 1.5                |
| 1411-2 <sup>(1)</sup> -800 | 80:5          | ±2%               | 2.0                | ±2%               | 4.0                |
| 1411-2 <sup>(1)</sup> -101 | 100:5         | ±1%               | 2.0                | ±1%               | 5.0                |
| 1411-2 <sup>(1)</sup> -151 | 150:5         | ±1%               | 4.0                | ±1%               | 8.0                |
| 1411-2 <sup>(1)</sup> -201 | 200:5         | ±1%               | 4.0                | ±1%               | 10.0               |
| 1411-2 <sup>(1)</sup> -301 | 300:5         | ±1%               | 8.0                | ±1%               | 15.0               |

(1) When ordering, prefix Cat No. with model designation required, for example, 1411-2SFT-301 or 1411-2DRL-301.

## 1411-8xxx Dimensions and Accuracy

Figure 2 - 1411-8xxx Dimensions

